
 
INSTALLATION INSTRUCTIONS 9898 Rim Type Exit Device


SARGENT


ASSA ABLOY

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

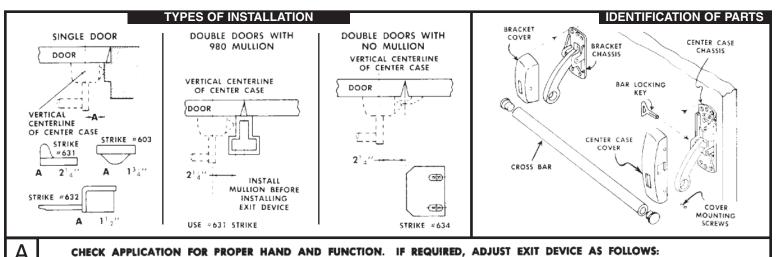



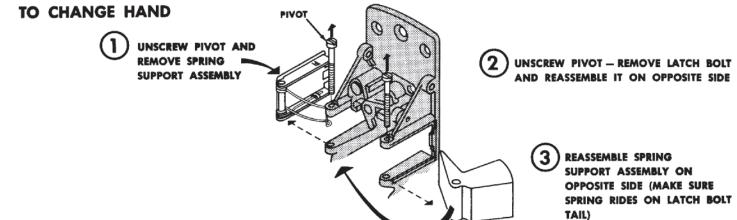


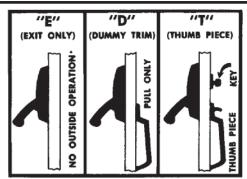

FOR FUNCTIONS "E",

CYLINDER HUB MUST BE IN THIS POSITION.

TO CHANGE POSITION OF CYLINDER HUB - PULL OUT AND ROTATE

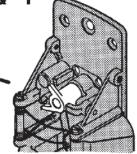




POSITION OF CYLINDER HUB & LOCKING LEVER FOR FUNCTIONS "E". "D" & "T"



FOR FUNCTION "K"

CYLINDER HUB MUST BE IN THIS POSITION

TO CHANGE POSITION OF CYLINDER HUB - PULL OUT AND ROTATE

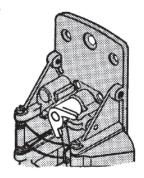



POSITION OF CYLINDER HUB & LOCKING LEVER FOR FUNCTION "K".

