

80-9369-0120-021 (04-03)

Standard Duty Double Lever Arm Application for Frame Reveals to 6-7/8" (175mm) Stop (Push) Side of Door Installation For Handed Units Door Openings 85° to 110° Use CL4051 Door Operator Door Openings 111° to 180° Use CL4052 Door Operator





Activation Modes (Modes are configured during installation.)

- Selectively Activated Mode unit depends upon external switches or scanners for activation of functions.
- Automatically Activated Mode (Push and Go) unit will operate
 with a slight movement of the door toward the open position
 utilizing on-board ELS switching that automatically activates the
 functions. External switches or scanners may also be used for
 activation.

Functions (Functions are configured during installation.)

- Power Operator function (POR) The unit performs as a low energy power door operator. Field settings allow for following two functions:
- 1. Selectively Activated Mode (See Above).
- 2. Automatically Activated Mode (See Above).
- Power Assist function (PAS) The unit operates as a standard door closer unless activated via one of the Modes listed above. Upon activation the door opening resistance is reduced, for a selected period of time, well below A.D.A. guidelines. When the time period expires, the door closes under normal door closer spring power.
- *DOOR WILL NOT OPEN BY ITSELF WHEN PAS FUNCTION IS SELECTED.

NOTE: The ELS Board Dip Switches are factory set in the Selectively Activated Mode as a Power Operator Function.

Americans With Disabilities Act (A.D.A.)

These door operators can be installed and adjusted to conform with A.D.A. regulations.

ANSI Standards



ANSI A117.1 – These door operators permit door assemblies to conform to the requirements of this specification "for buildings and facilities – providing accessibility and usability for physically handicapped people".

- ANSI A156.19 These products are designed to conform to this specification "for power assist and low energy power operated doors".
- "PAS" Function is designed to meet or exceed all of the requirements for the "Power Assist Door".
- "POR" Function is designed to meet or exceed all of the requirements for the "Low Energy Power Operated Door".

U.L. Listing



Underwriters Laboratories, Inc. listed for use on fire and smoke barrier door assemblies when the 120VAC (60Hz) power input is supplied through the normally closed alarm contacts of a compatible U.L. Listed alarm system or alarm panel.

WARNING


120 VOLT POTENTIAL PRESENT. MAKE SURE POWER IS TURNED OFF DURING INSTALLATION PROCEDURE. An incorrectly installed or improperly
O adjusted door operator can cause property
damage or personal injury. These
instructions should be followed to avoid the
possibility of misapplication or
misadjustment.

Basic Requirements2	General Product Information6
Parts Identification2	Function and Operation Sequence6
Installation Template3	ELS "Timing" Calibration7
Installation Sequence4	ELS Reset Instructions8
Regulation & Adjustment5	Troubleshooting 8


Requirements

- U.L. labeled fire or smoke barrier door assemblies require that the 120VAC (60Hz) power input to the door operator be supplied through normally closed alarm contacts of the alarm system/alarm panel.
- Power input to door operator must be 120 VAC (60Hz) to terminals HOT and COM at terminal strip T1. Terminal GND is earth ground.
- All wiring must conform to standard wiring practice in accordance with national and local wiring codes.
- Note: Unless otherwise noted, all dimensions are given in inches (millimeters).
- · Minimum frame face 2" (51mm).
- · Minimum ceiling clearance 4-1/8" (105mm).

- Minimum suggested and required material thickness for hollow metal frames (skin plus reinforcement) is charted on page 3.
- For wiring refer to Wiring Instruction 80-9369-0901-021.
- Hand of unit and hand of door must be the same. Hand of unit is not reversible.
- Door must be hung on butt hinges [5" (127mm) max. width] or 3/4" (19mm) offset pivots. A separate door and frame preparation template will be supplied for other conditions.
- Door thickness must be 1-3/4" (44mm) minimum, 2-1/4" (57mm) maximum.
- Door must swing freely through the entire opening and closing cycle before beginning the installation.
- · Use of a supplemental door stop is always recommended.

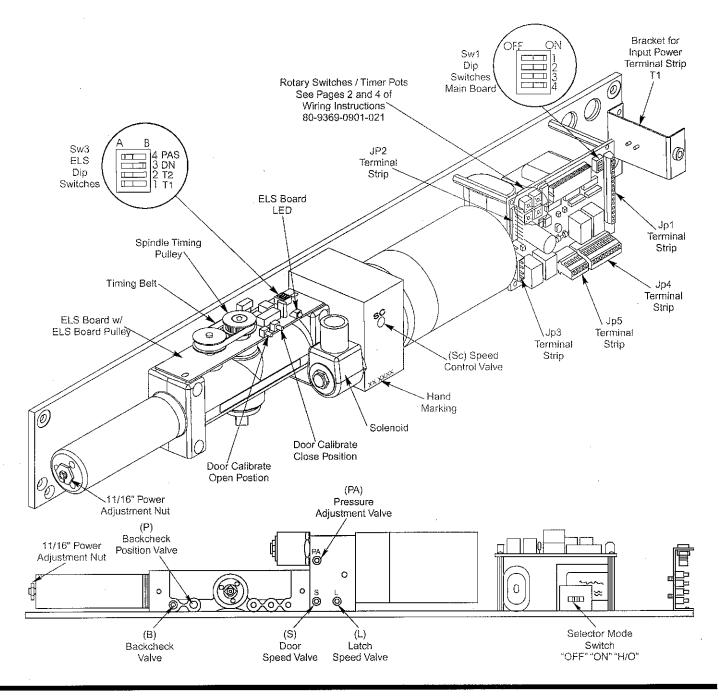

DETERMINE HAND OF DOOR

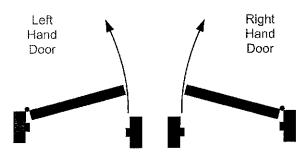

Hollow Metal Door Frame Reinforcing		
Frame	Reinforcing	
Material	Recommended	Min. Required
12 Ga. . 1046 (2.66)	12 Ga. . 1046 (2.66)	18 Ga. .0478 (1.21)
14 Ga. .0747 (1.90)	10 Ga. . 1343 (3.41)	1 2 Ga. . 1046 (2.66)
16 Ga. . 0598 (1.52)	10 Ga. .1343 (3.41)	1 2 Ga. . 1046 (2.66)
18 Ga. .0478 (1.21)	8 Ga. .1 644 (4.18)	10 Ga. .1343 (3.41)

General

- Before beginning the installation, verify that the door frame is properly reinforced and is well anchored in the wall. Unreinforced hollow metal frames and aluminum frames should be prepared and fitted with 1/4-20 blind rivet nuts, furnished by the installer.
- Concealed electrical conduit and concealed switch or sensor wires should be pulled to the frame before proceeding.

Fasteners for Frame


- 1/4-20 Machine screws for hollow metal and aluminum.
- No. 14x2-3/4" (70mm) long wood screws.

Fasteners for Door

- 1/4-20 Machine screws.
- 3/8" diameter x 1-3/4" (45mm) long mortise nut...

WARNING

- 1. Make sure that (120V, 60Hz) input power is turned off before proceeding with installation.
- 2. If installing with 4001D or 4002D Drop Bracket, USE INSTALLATION DIMENSIONS INCLUDED WITH BRACKET. DO NOT USE DIMENSIONS SHOWN BELOW.

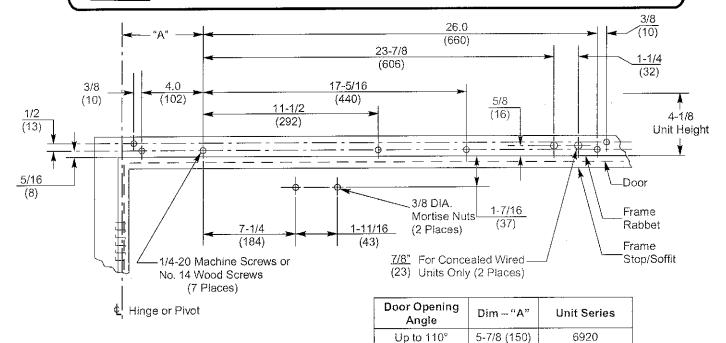

111° to 180°

Notes:

- · Do not scale drawing.
- · Left hand door shown.
- · All dimensions are given in inches (mm).
- Thickness recommended for reinforcements in hollow metal doors and frames is charted at the top of this page.
- This template information based upon use of 5" (127mm) maximum width butt hinges or 3/4" (19mm) offset pivots. A separate template will be supplied for other conditions.

6930

Maximum frame reveal is 6-7/8" (175mm) for this application.

3-1/8 (80)

· Conduit hole farthest from hinge is suggested for 120 VAC power input.

Installation Sequence

WARNING

If installing with 4001D or 4002D Drop Bracket, Use Installation Sequence included with Bracket Kit.

- · Determine hand of door from illustration on Page 3.
- · Using template, locate and prepare holes in the frame and door:

Frame


- Concealed Wired Units Only: Two (2) 7/8" (22mm) diameter holes for conduit, for power input and for switch/sensor wires.
 - **NOTE:** On new construction these holes will generally be drilled by the frame supplier at their shop or at the time the frame is installed in the wall
- Prepare seven (7) holes for 1/4-20 machine screws or No. 14 x 2-3/4" (70mm) wood screws. Blind rivet nuts (by others) are suggested for unreinforced hollow metal frames or for aluminum frames.

Door

- Prepare two (2) holes for 3/8" diameter mortise nuts. Standard units are supplied with mortise nuts and screws for 1-3/4" (44mm) thick door. Mortise nuts and screws for other door thicknesses are available to order.
- Remove cover from door operator assembly and set cover and cover screws aside.
- · Fasten Door Operator to frame face
 - Concealed Wired Units Only: Connect conduit to backplate before fastening backplate to frame.
 - Surface Wired Units Only: Fasten backplate to frame. Connect conduit bracket, from screw pack, to the door control's backplate with two (2) screws provided. Then connect wiring conduit to conduit bracket on backplate.
- Remove screws from the arm adjusting rod and disassemble the arm slide and shoe assembly from the arm assembly.


NOTE: Series 4051 Models Only.

IF frame reveal is less than 3-1/4" (83mm) use a saw and cut 1-7/8" (48mm) off the end to the adjusting rod.

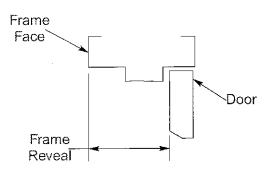


- Fasten arm slide and shoe assembly to the door with the long end of arm shoe away from the hinge.
- Slide the main arm onto the spindle end of the door control unit at a 90° angle to the door control unit and frame. Align arm mark "S" with the flat corner of the spindle end square (see illustration above right).

Install and tighten 1/4-20 Flange Head Screw with 7/16" wrench or socket.

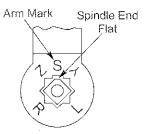

- Open Door. Align and insert adjusting rod into the arm slide.
 Close Door.
- Rotate the main arm away from the hinge until the adjusting rod and arm slide are perpendicular (at a 90° angle) to the door.
 Secure at 90° angle with the screw.

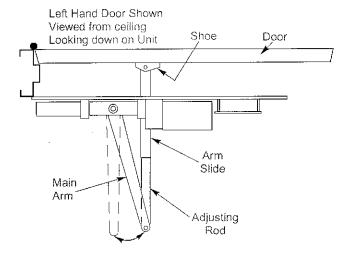

- Adjust valves "S" and "L" using the 1/8" hex wrench provided. See Hydraulic Adjustment Page 5
 - Note: A.D.A. Requires that from an open position of 70° the door will take at least 3 seconds to move to a point 3° (75mm) from the latched position, measured at the leading edge of the door.
- Make wire connections using Wiring Instructions No. 80-9369-0901-020

IMPORTANT:

- Power Operator Units Only: The opening speed of the door from closed position to 80° must be 3 seconds or longer and 4 seconds or longer to the fully open position.
- Power Operator Units Only: The force required to prevent a
 door from opening or closing must not exceed a 15lbf. (67N)
 applied 1" (25mm) from the latch edge of the door at any point in
 the opening or closing cycle.

TEACHING CLOSED AND OPEN DOOR POSITIONS:

Before operating, the Door Operator must be "taught" the fully closed and fully open door positions.

• ELS board comes from factory with potentiometer "timed" and ready for unit to be taught open and closed door positions.

warning: Verify that dip switch #3 on the ELS board is in the "A" position to disable the Push and Go Feature. Verify the Selector Mode Switch is in the "OFF" position (Page 2)

- Turn Power Input to Unit "ON".
- With the door fully closed, press and release the BLACK pushbutton on the ELS board. The ELS system will store this position as closed and begin the 10 second "Teaching Mode".
- Within the 10 second time frame, manually open the door to the desired fully open position. While holding the door open in this position, press and release the WHITE pushbutton on the ELS board. The ELS system will store this position as open.
- Let the door return to the closed position. This will end the "Teaching Mode" regardless if the 10 second time frame has elapsed.
- Set the Selector Mode Switch to the "ON" position for normal operation or "H\O" for indefinite hold open.
- →★ NOTE: If unit does not respond to teaching or if the ELS LED began flashing when power input was first turned on and continues to flash, see ELS Reset Instructions on page 8.

Activation Mode - (Push and Go)

Mode	Push And Go	ELS Dip #3 DN
Selectively Activated	DISABLED	А
Automatically Activated	ENABLED	В

Functions - Power Operator / Power Assist:

Function	ELS Dip #4 PAS	Main Board Dip #1 P/A
Power Operator	В	OFF
Power Assist	А	ON

- Rotate the "SC" Valve Counter-Clockwise to adjust opening speed (POR) or opening force (PAS).
- Rotate the "PA" Valve Clockwise if needed to adjust pressure.

Power Assisted Opening: Adjust the "SC" valve so the the door does not open when activated, but opening force is reduced below A.D.A requirements. The "PA" valve is factory set and should not need adjustment. Adjust if needed to obtain proper opening forces. (See illustrations on page 2 for Dip Switch and Valve location.

Obstruction Operation:

Obstruction During Opening:

The door will stop and close under spring force.

Obstruction During Closing:

The door will stop and the unit will reopen the door. If the Obstruction During Closing is detected a second time, the door will not attempt to reopen and will attempt to close under spring force.

Obstruction Sensitivity

The time delay of the obstruction feature can be adjusted in the field as required. The unit has been factory-configured to respond immediately to an obstruction. In certain applications where excessive wind or excessive stack pressure is present, a delay of 1, 3, or 5 seconds can be selected by toggling dip switches T1 and T2 on the ELS board.

OBSTRUCTION DIP SWITCH SETTINGS:

Time	ELS Dip Switch T1	ELS Dip Switch T2
Immediate	В	8
1 Sec.	A	В
3 Sec.	В	Α
5 Sec.	А	A

Adjustments for the Door Operator

The following adjustments mechanical, hydraulic and electrical are listed in a suggested sequence.

 
NOTE: Make sure that power to unit is OFF.

MECHANICAL ADJUSTMENT


 Set Closing Power. Use 11/16" wrench or socket. Turn Power Adjustment Nut clockwise to increase door closing power. Door closer is shipped set at midpoint of power setting. Maximum closing power can be achieved with 5 (360°) turns of the power adjustment nut.

HYDRAULIC ADJUSTMENT - Use 1/8" hex wrench

 Closing Cycle – Make adjustments, as necessary, to the Sweep Speed "S" valve and Latch Speed "L" valve. See illustration on Page 2. Turn valves clockwise to reduce speed, counter clockwise to increase speed.



  Opening Cycle – Adjust Backcheck, "B" valve, as necessary, for hydraulic resistance to door opening in the backcheck range. See illustration on Page 2



NOTE: Too much Backcheck, "B" valve, can affect the operation of the units pump, preventing units from fully opening the door. This valve may require fine tuning after all other adjustments have been made.

 Backcheck Position "P" valve is closed. Open by turning counter clockwise, only if backcheck cushioning is required to begin at a greater degree of door opening than the approximately 75° it is set for.

ELECTRICAL:

Turn power input to unit on.

Selector Mode Switch – Set to the "ON" Position for normal use.

- Adjust "CL/AS DLY" Rotary Switch/Timer Pot on the printed circuit board as necessary using a standard screwdriver with a 1/8" wide blade. Adjustable for 0 to 30 seconds (see chart below).
- Power Assist Function Only:
 Adjusts the length of time the motor will assist with opening from the time the motor is activated.
- Power Operator Function Only:
 Adjusts the length of time the door remains at the fully open position after the operator function shuts off.

 


Illustration for CL/AS DLY
Rotary Switch/Timer Pot
From Printed Circuit Board

Length of Time (Seconds)	Setting
0	Ü
2	1
5	2
10	3
15	4
20	5
25	6
30	7

- If desired, install No. 668 Security Plate over notch in cover to conceal the Selector Mode Switch when cover is installed.
- Install cover with mounting screws removed at beginning of installation.

General Product Information (See illustrations on page 2 for location of switch and valves.)

- Selector Mode Switch This is a three (3) position switch that has positions marked "OFF" "ON" "H/O".
- "ON" position Unit is in standby, capable of function activation either by a remote switch or scanner; or by the unit's integral switch depending upon the Activation Mode.
- "H/O" position Indefinite hold open. Door will hold open until power is interrupted.

Power Assist Function Only (PAS).

These units must be manually pushed to the full open position for this indefinite Hold Open function to operate.

- "OFF" position – All signal inputs are disabled, rendering all power functions inoperative. The unit functions as a standard hydraulic door closer.

· "SC" Speed Control Valve

Power Assist Function Only.
 Adjusts the force required to open the door.

Power Operator Funtion Only (POR).
 Adjusts the opening speed of the door:

Important:

From closed position to 80 degrees must be 3 seconds or longer and 4 seconds or longer to the fully open position.

"PA" pressure Adjustment Valve

Factory set adjustment for opening force. Will not generally require adjustment:

Important:

Power Operator Function Only (POR): The force required to prevent a door from opening or closing must not exceed a 15 lbf. (67N) applied 1" (25mm) from the latch edge of the door at any point in the opening or closing cycle.

Function and Operation Sequence VESTIBULE OPERATION

In either Power Operator or Power Assist Function, initiation of a power cycle may be performed on a delayed basis. This feature, referred to as Vestibule Operation, allows placement of the initiating switch at a remote location from the Door Operator. The adjustable VEST DLY rotary switch/timer pot is provided for selection a length of delay, appropriate for the particular installation. The basic sequence is shown below:

- Initiate vestibule delay cycle JP1-INV from JP1-OUTV of another unit or from a switch.
- Set VEST DLY rotary switch/timer pot to delay initiation of pump motor.
- Upon initiation of pump motor, Power Operator or Power Assist Function will start.

POWER OPERATOR FUNCTION - "POR"

In the power operator function, initiation of the unit causes the operator to fully open the door under its own power, sustain the opened position for a set duration, and then release and close.

The basic sequence is:

 Initiate power cycle through any of the following JP1 terminal functions: AUX1, AUX2, RFT, JP1-INV, the L1 limit switch input, the H/O of slide switch or the JP1-O/O terminal.

- If JP1-INV is the power cycle initiating signal, read the VEST DLY rotary switch/timer pot to determine how long to wait before the power cycle starts.
- Read the EXSOL DLY rotary switch/timer pot to determine how long solenoid should be energized or de-energized, depending upon function required.
- Read the SW1-2 (A/D) dip switch to determine how long solenoid should be energized.
- Read the M DLY rotary switch/timer pot to determine how long before the pump motor and solenoid valve turn on.
- 6. When ELS board reaches upper taught limit, door is fully
- 7. Pump motor turns off.
- Read the CL/AS DLY rotary switch/timer pot to determine the length of temporary hold open.
- Solenoid valve turns off, releasing door from temporary hold open.
- Door closes and operator waits for next power cycle initiation.

Additional door open signals received during Step 8 of the Power Operator function will cause the closing delay timer to be reset to the beginning.

Exceptions to the Power Operator Function

Following is an explanation of the inputs that can modify the basic flow of the Power Operator function described above.

- If terminal JP1-PDET is signaled the door will not open if it is closed or the door will not close if it is open. This signal is normally used to connect to a presence detector which will prevent the door from opening or closing when someone is in the area of detection. Note that JP1-0/0 will override the PDET signal.
- 2. If JP1-0/0 is signaled the door will open independently of the state of JP1-PDET or JP2-E signals.
- If the H/0 slide switch is set, the door will open and remain open. JP1-PDET, JP1-0/0 or JP2-E will override the H/0 signal.
- If JP2-E is signaled, the power cycle will terminate and the door will close. JP1-0/0 will override the JP2-E signal.
- The door must reach its fully open position within 7 seconds after it has started opening or the pump motor and solenoid valve will be turned off allowing the door to close.

6. If the door is in the closed position, and not in the Manual or Emergency mode, signaling RFT will initiate a door power cycle. The door will remain open until PH1-RFT is again signaled or until JP2-E is signaled. If the door is in the open position, the RFT signal will close the door, therefore, the door can be "toggled" between an open and closed position.

POWER ASSIST FUNCTION - "PAS"

In the Power Assist function, initiation of a power cycle causes the pump motor and solenoid valve to engage, requiring minimal force to open or close the door. The ease of operation is sustained for an adjustable duration, after which the motor and solenoid are turned off, causing the door to close. If the door is fully opened during the power cycle, the motor will disengage for the remainder of the cycle. The solenoid will remain engaged for the duration of the cycle. The basic flow for the Power Assist mode is the same as the Power Operator mode except that the 7 second time-out function is not in effect.

ELS Board Timing Instructions:

WARNING: Make sure dip switch #3 on ELS Board is in the "A" position and the Selector Mode Switch in is the "OFF" position when preforming ELS Board Timing Calibration. (See Page 2)

READ STEPS COMPLETELY BEFORE PROCEEDING.

The ELS board is calibrated (Timed) to appropriate starting zone at the factory. If for any reason the ELS Board was removed or the ELS Board Pulley is turned without the pinion turning, it is likely the ELS board will need to be re-calibrated (timed).

During a normal installation, this procedure is not required.

The ELS board may be timed while unit is mounted to the frame and door. The unit may also be timed off the frame and door with the pinion in the at rest position (no pre-load).

<u>NOTE:</u> IF UNIT IS MOUNTED TO FRAME AND DOOR DURING THESE PROCEDURES, THE DOOR MUST BE IN THE <u>CLOSED</u> POSITION DURING "TIMING" OF BOARD.

Verify Power Input to Unit is "OFF"

Loosen the pinion timing pulley screw with a 5/32 hex wrench so that the pinion timing pulley is free to rotate independent of pinion. Maintain tension on timing belt. Belt should be tensioned so that the belt can deflect 1/16" to 1/8".

Remove Pre-Load from Arm. Loosen 1/4-20 Screw on Arm Slide and allow main arm to rotate toward hinge until it is perpendicular with frame face.

Determine Hand of Door. See hand marking found on unit manifold (See Page 2). This will determine the proper calibration step to follow below.

Verify that ELS Dip Switch #3 is in the "A" Position and Selector Mode Switch is turned "OFF".

RH-PUSH UNITS:

- Rotate the ELS Board Pulley Counter-Clockwise unit hard stop is reached.
- Depress and hold Black Button on the ELS Board. While depressing button, turn power input to unit "ON" and continue depressing button until the ELS Board LED flashes three (3) times. The installer then has three (3) seconds to release the button after the LED flashes.
- Slowly rotate ELS Board Pulley Clockwise (away from hard stop less than 1/8th turn) until the LED on the ELS board lights,
 - Note: Pinion pulley should be rotating with the ELS Board Pulley during this step.
- Hold the Pinion Pulley stationary white tightening the pinion timing pulley screw with a 5/32 hex wrench.**
- The ELS board is now calibrated for a RH-PUSH Unit.


LH-PUSH UNITS:

- Rotate the ELS Board Pulley Clockwise unit hard stop is reached.
 Depress and hold Black Button on the ELS Board. White depressing button, turn power input to unit "ON" and continue depressing button until the ELS Board LED flashes three (3) times. The installer then has three (3) seconds to release the button after the LED flashes.
- Slowly rotate ELS Board Pulley Counter-Clockwise (away from hard stop less than 1/8th turn) until the LED on the ELS board lights. <u>Note</u>: Pinion pulley should be rotating with the ELS Board Pulley during this step.
- Hold the Pinion Pulley stationary while tightening the pinion timing pulley screw with a 5/32 hex wrench.**
- The ELS board is now calibrated for a LH-PUSH Unit.

Pre-Load Arm per instructions. See page 4.

Re-teach Closed and Open Positions. See page 5.

Place 3 position Selector Mode Switch in the "ON" position for normal operation.

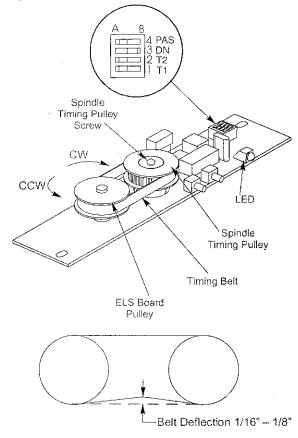

**NOTE: If LED should turn off during the above procedure without any significant movement of ELS Board Pulley, this is not a problem. The timing zone range is large enough to allow for slight movement of ELS Board pulley during tightening of spindle timing screw.

Note: The ELS board is factory-calibrated without any pre-load on the spindle. When the unit is properly installed, and there is pre-load on the spindle, the light on the ELS board will not be lit. This is not a problem. The LED is simply intended to set the ELS Board Pulley in the appropriate "timing zone".

★ ELS Reset Instructions: READ INSTRUCTIONS COMPLETELY BEFORE PROCEEDING

Disconnecting Power to Unit

If power input does not have a interrupt switch near by, power may be terminated at unit by unseating Fuse F2.

- Choose a flat blade screw driver that will fit snugly into slot on fuse holder
- Carefully push on Fuse Holder cap while turning Counter-Clockwise 1/4 turn to unseat fuse holder cap. Gently pull cap out slightly and note if LED on Main Board is Lit. If there is no


Reset ELS Board

Depress and hold the <u>Black Button</u> on the ELS Board. While
depressing button, turn power input to unit ON **. The LED
on the ELS Board will begin flashing. When the LED flashes
three(3) times, the installer has three (3) seconds to release
the button.

Reconnect Power to Unit

 To reseat fuse, Carefully push fuse holder cap into holder and turn Clockwise 1/4 turn.

Return to "Teaching Closed and Open Door Positions on Page 5.

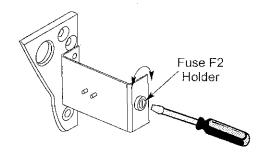

**NOTE:

When performing this step of the ELS Reset Instructions, you may push on Fuse Holder Cap with screw driver to temporarily engage power so that attention can be directed at the ELS LED. Once the LED has flashed 3 times and the BLACK button released, then the installer may properly reseat the fuse.

Troubleshooting

Because of the sophisticated nature of the Door Operator, there are a number of steps during the installation procedure that if overlooked or misapplied, can create incorrect functioning or a complete failure of operation.

- · Door Closing Force is Insufficient
- Increase spring power with Power Adjustment Nut.
- Check Sweep Speed and Latch Speed regulation valves.
- · Door Opening Force is Too Strong
- Adjust "PA" valve turn counter clockwise.
- Door Opens Too Fast Power Operator Function Units Only – Adjust "SC" valve – turn counter clockwise.
- Door Does Not Open Far Enough Power Operator Function Units Only
- Re-teach door Closed and Open position on the ELS board.
 (See Page 4)
- Adjust "PA" valve turn clockwise.
- Check "B" backcheck valve turn counter clockwise.
- Check template position of unit on the frame and the door.
- Operator Motor shuts off and door closes before reaching full open position.
 - a. This could be caused by the unit sensing an obstruction on Opening.
 - Verify door can be mechanically opened; check for frame interference.
 - Check Backcheck setting on closer body. If Backcheck is too strong, unit may be seeing this as an obstruction.
 - Check "SC" (Speed Control) Valve setting. Door may be opening too slowly. Turn "SC" valve clockwise to increase speed.
 - 4. There may be wind or some other positive pressure present. Adjust Obstruction Sensitivity to a longer time setting. See page 7.

- Operator Motor turns on and re-activates door before it reaches lam or closed position.
 - a. This could be caused by the unit sensing an obstruction on Closing.
 - 1. Check for frame interference.
 - 2. Verify the transition from sweep speed to latch speed is smooth. If there is an abrupt change in speed or if door stops as it transitions from sweep to latch, the unit will see this as an obstruction.
 - 4. There may be a wind or some other positive pressure present. Adjust Obstruction Sensitivity to a longer time setting. See page 7.
- . Door Does Not Appear to be Receiving Power
 - Selector Mode Switch is in "OFF" position.
 - Check to see if red LED is illuminated on printed circuit board.
 - If yes:
 - Check solenoid and motor connectors and connections, that they $% \left(x\right) =\left(x\right) +\left(x\right)$ are secure.
- If no:
 - Check incoming power at the input power terminal strip (terminals HOT and COM) to insure that power leads are oriented correctly and are fastened securely.
 - Check fuse "F2".
 - If blown, unplug solenoid and motor lead connectors.
 Replace fuse and check LED.
 - If illuminated, either the solenoid coil or the motor connections, wire or motor windings are defective.