

INSTALLATION INSTRUCTIONS

12-980 & EL980 Mullion Holder

(Part No. 98-2579 & 98-2580)

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com


ATTENTION!

FOR A HOLLOW WALL:


- LOCATE THE VERTICAL CENTERLINE OF THE MULLION HOLDER ON THE CENTER LINE OF WALL STUD.
- MOUNTING SCREWS (NOT INCLUDED) FOR THE WALL BRACKET MUST GO INTO THE WALL STUD.
- USE THE APPROPRIATE HARDWARE TO MOUNT WALL BRACKET ON THE WALL.

TO INSTALL MULLION HOLDER:

1. DETERMINE VERTICAL CENTERLINE OF MULLION LOCATION ON THE WALL AND TRANSFER IT ON THE FLOOR PERPENDICULAR TO THE WALL.
2. LOCATE THE CENTER LINE OF THE BOTTOM RETAINER 1 1/8" FROM THE WALL PARALLEL TO IT.
3. INSTALL BOTTOM RETAINER ON THE FLOOR AS SHOWN, USING THE HARDWARE PROVIDED (TWO ANCHORS WITH SCREWS).
4. PLACE THE MULLION ASSEMBLY ON THE BOTTOM RETAINER. WHILE HOLDING MULLION VERTICAL, APPLY THE TOP RETAINER TO THE MULLION AND MARK THE LOCATION OF THE TOP SURFACE OF RETAINER ON THE WALL (MARK 1, FIG.1).
MAKE A SECOND MARK 3/8" ABOVE MARK 1 (MARK 2, FIG.1).
5. TO MOUNT WALL BRACKET TO THE WALL:
 - LOCATE THE TOP SURFACE OF THE BRACKET ON THE MARK 2;
 - ALIGN VERTICAL CENTERLINE OF THE BRACKET WITH THE VERTICAL CENTERLINE OF THE MULLION;
 - MOUNT THE WALL BRACKET TO THE WALL USING HARDWARE PROVIDED (TWO ANCHORS WITH 1/4-20 FLAT HEAD SCREWS);
 - ASSEMBLE THE TOP RETAINER WITH WALL BRACKET AS SHOWN USING FOUR 1/4-20 SCREWS PROVIDED.
6. CHECK THE INSTALLATION BY LOCKING THE MULLION INTO THE HOLDER.

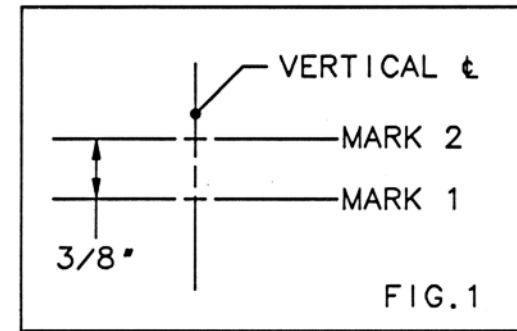

SARGENT
ASSA ABLOY

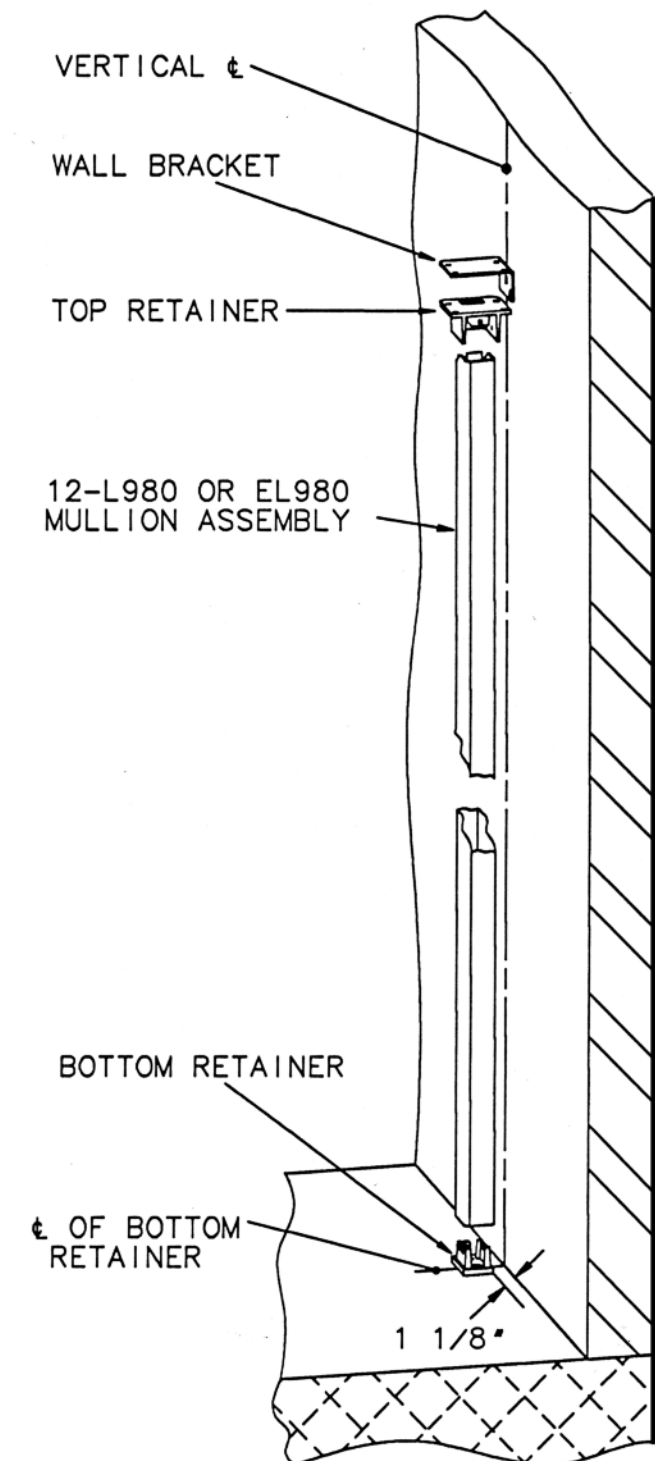

Copyright © 2009, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.