


INSTRUCTIONS FOR INSTALLING PULL SET U93-2, IN STEEL DOORS


A

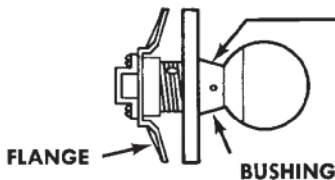

LOOSEN BUSHING ON KNOB
ASSEMBLY ALL THE WAY

B

WITH FLANGE HORIZONTAL—
SLIP ONE END INTO CROSS
BORE HOLE AND SLIDE ALL
THE WAY TOWARD EDGE OF
DOOR.

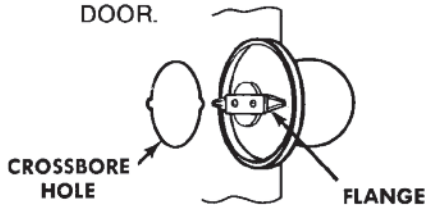


STRAIGHTEN ASSEMBLY SO THAT
OTHER END OF FLANGE ENTERS
HOLE— THEN CENTER ASSEMBLY
IN HOLE.



C

WHILE PULLING ON KNOB
TIGHTEN BUSHING

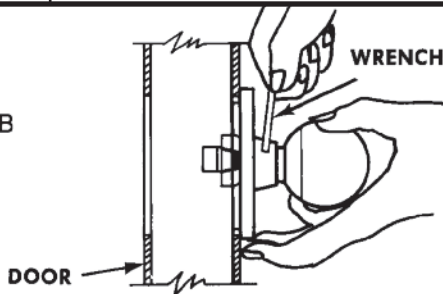

D

FOR U93-2 PULL SET ONLY

FITS: ANSI A115

MOUNT INSIDE ROSE ASSEMBLY
WITH $\frac{1}{4}$ -20 x $1\frac{3}{8}$ " MACHINE SCREW
FOR $1\frac{3}{4}$ " DOORS. FOR $1\frac{1}{2}$ " DOORS
OR LESS USE $\frac{1}{4}$ -20 x 1" MACHINE
SCREW.

MOUNT BLANK FRONT WITH
#8-32 x $\frac{3}{4}$ " MACH. SCREWS.

