


**584K WOOD DOOR KIT
FOR USE WITH SP/PP/PR 8600**

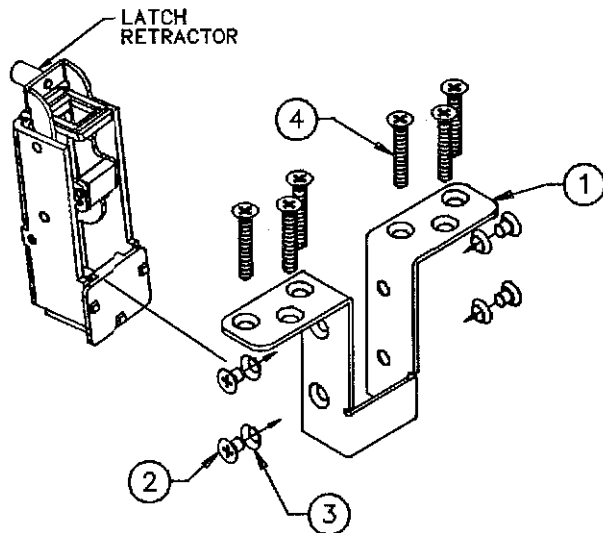

STEP 1.

ENSURE TOP OF DOOR HAS BEEN PROPERLY PREPARED PER EXIT DEVICE TEMPLATE.

STEP 2.

SECURE WOOD DOOR BRACKET ITEM 1 TO TOP CASE ASSY WITH FOUR #10-24 X 1/4" SCREWS ITEM 2 AND LOCK WASHERS ITEM 3.

STEP 3.

INSTALL TOP BOLT AND ROD ASSEMBLY INTO TOP CASE. SLIDE THE ASSEMBLY INTO THE DOOR CHANNEL, WITH THE LATCH RETRACTOR TOWARD THE INSIDE DOOR FACE. WHEN FULLY INSERTED THE TOP OF THE BRACKET WILL BE FLUSH WITH THE TOP OF THE DOOR.

STEP 4.

USING THE COUNTERSUNK HOLES IN THE BRACKET AS A GUIDE DRILL SIX 1/8" PILOT HOLES IN TOP OF DOOR.

STEP 5.

SECURE TO DOOR WITH SIX #12 X 2" WOOD SCREWS ITEM 4.