
INSTALLATION INSTRUCTIONS FOR P SERIES LEVER TRIM

For installation assistance, contact SARGENT at 800-727-5477 • www.sargentlock.com

P7 / P8 LEVER TRIMS

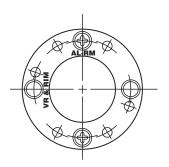


SARGENT Functions	ANSI Functions	P8 Lever & Rose Designations	P7 Lever & Rose Designations	Function
10	02	P8-D-L	P8-D-L	Dummy Pull Only
04	03	P8-K-L	N/A	Key retracts latchbolt
06	09	P8-N-L	P8-N-L	Key Unlocks Lever, Lever relocks when Key is removed
13	08	P8-C-L	P8-C-L	Key locks/unlocks Lever
15	14	P8-L-L	P8-L-L	Passage

Note: Product Designation (P8 or P7) is followed by the function designation (D, K, N, C or L), then the Rose Design (L) followed by the two digit Lever Designation Lever

SCREWS

DISASSEMBLY OF TRIM BEFORE INSTALLING

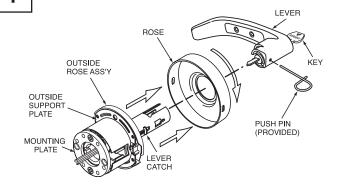

REMOVE LEVER AND ROSE

- 1. TURN KEY 45° CLOCKWISE (FOR KEY FUNCTIONS)
- 2. DEPRESS LEVER CATCH THROUGH HOLE IN LEVER
- 3. SLIDE LEVER FROM THE TUBE
- 4. REMOVE ROSE

OUTSIDE SUPPORT **INSTALLING TRIM** OUTSIDE ROSE ASS'Y PLATE MOUNTING **PLATE** CHASSIS ® (B) LEVER CATCH TAR OF SUPPORT PLATE TUBE ASSEMBLY #10 -32 FILLISTER HEAD MACHINE


SLIDE LEVER & ROSE ASSEMBLY INTO 2-1/8" DOOR PREP (LEVER CATCH TOWARDS DOORS EDGE).

NOTE: SUPPORT PLATE TABS ENGAGE NOTCHES IN THE 2-1/8" HOLE. THROUGH-BOLT THE LEVER & ROSE ASSEMBLY THROUGH THE CHASSIS WITH (2) #10-32 SCREWS. DO NOT TIGHTEN SCREWS AT THIS TIME.

OUTSIDE ROSE ASS'Y

ROSE SCAL P

SECURE TRIM TO DOOR

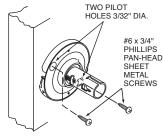

- 1. DRILL (2) 3/32" PILOT HOLES USING THE SUPPORT PLATE TO DETERMINE LOCATION.
- 2. SECURE LEVER & ROSE TRIM TO DOOR WITH (2) #6 x 3/4" SCREWS PROVIDED

ATTACH THE ROSE BY LOCATING THE LANCES, TWISTING & LOCK THE ROSE AS SHOWN.

2. TIGHTEN THE (2) THROUGH-BOLT SCREWS, SECURELY AT THIS TIME.

ROSE SCALP INSTALLATION

LANCE DETENT

POSITION




Copyright © 2007 SARGENT Manufacturing. All rights reserved. Reproduction in whole or in part without the express written

5 INS

INSTALL LEVER

- 1. INSERT FLAT TIPPED SCREWDRIVER INTO THE TUBE ASSEMBLY AND ROTATE KEY CAM AND COUNTER CLOCKWISE, UNTIL IT STOPS
- 2. WITH KEY PARTIALLY REMOVED FROM CYLINDER AND ROTATED 45° CLOCKWISE, PUSH LEVER ON TUBE ASSEMBLY UNTIL LEVER CATCH IS ENGAGED, VERIFY THE LEVER IS SECURELY ATTACHED.
- 3. CHECK FOR PROPER OPERATION: TURN KEY FULLY CLOCKWISE OR COUNTER CLOCKWISE. KEY WILL REMOVE IN A HORIZONTAL POSITION WITH BITTING (NOTCHES) TOWARD HINGE SIDE OF DOOR.

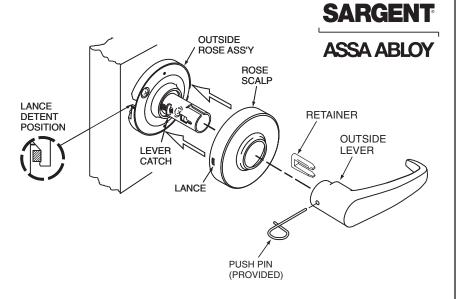

P8-D-LL DUMMY TRIM

INSTALLING TRIM

SLIDE LEVER & ROSE ASSEMBLY INTO 2-1/8" DOOR PREP (LEVER CATCH TOWARDS DOORS EDGE).

NOTE: SUPPORT PLATE TABS ENGAGE NOTCHES IN THE 2-1/8" HOLE. THROUGH-BOLT THE LEVER & ROSE ASSEMBLY THROUGH THE CHASSIS WITH (2) #10-32 SCREWS. DO NOT TIGHTEN SCREWS UNTIL THE FINISHED ROSE IS ATTACHED (SEE STEP 4).

